

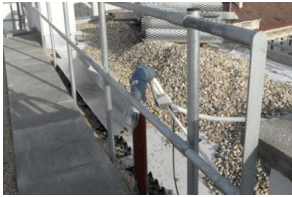
# BGS-Standard-FF

Railing system for demarcation of installer pathways  
#710901



## Manual

■ Green up the roof!

	<b>Application:</b>
<b>Installation instructions:</b>	
<b>Installation Tools:</b> Compact bedding with a 200-300 lb. landscape roller or hand held compactor. Use a #6 hex key, also known as an Allen key or wrench, to install the bolts required for the assembly of the components.	
<b>Installation Photos:</b>	

Reviewed: 2012-11-26 15:26:12